

DSSE

PRODUCT MANUAL



ESTIA BEAUTY BED BB19

The Estia – Where Versatility Meets Comfort

The Estia is a dual-purpose treatment bed and chair designed for professional use where flexibility and comfort are required. Suitable for massage and a wide range of treatments, it features a manually adjustable backrest and electric height adjustment, operated via a simple handheld control. Built with a high load-bearing frame, the Estia also includes two lockable wheels for easy repositioning and secure stability during use.

Introduction

This manual is intended solely as a reference for the operation of this specific model. DSSE assumes no responsibility or liability for any consequences resulting from its use for other purposes. All information contained in this manual is protected by copyright and may not be copied, reproduced, or translated, in whole or in part, without the prior written consent of our company.

Safety Instructions

- Always disconnect the power supply before changing electrical components or performing maintenance and cleaning on the equipment.
- The plug must be connected to a properly installed and grounded outlet to prevent the risk of fire or electric shock.
- Do not stand on the equipment.
- Keep children away from the equipment; place it out of their reach. Always adjust the backrest to its highest position when leaving the equipment unattended.
- Do not place the equipment in damp or wet areas such as bathrooms to avoid electric shock or malfunction. The remote control should also be kept away from water.
- Avoid using the equipment in environments where painting, coating, or oxygen provision is taking place.
- Unless supervised or instructed by qualified personnel, people with physical disabilities, sensory disorders, mental impairments, lack of experience or common sense, and children are not permitted to use the equipment.
- If the plug is damaged, contact your distributor, service center, or a qualified professional for repair.
- Ensure there are no objects within the equipment's movement range during operation.
- All maintenance must be performed by trained professionals only.

Precautions

- The equipment should be operated by experienced personnel familiar with its structure, performance, and instructions.
- Read this manual carefully before installation, operation, and adjustment. Keep it for future reference.
- Do not use for single-side or single-point loading.
- Follow safety operation rules. Do not overload. Ensure all safety equipment is reliable and address any hazards immediately.
- Regularly tighten bolts and nuts to avoid failure due to loosening or vibration.
- Do not disassemble parts without proper authorization.
- If faults occur or abnormal noises are heard, stop usage immediately and have the equipment inspected.
- Only resume use after proper troubleshooting.
- This bed uses a power cord and must be plugged into a grounded outlet.
- Ensure the wheels are locked before any client uses the bed.
- Clean dust and stains using a neutral cleaning agent after each treatment.
- Keep hands, feet, and head clear of moving parts during adjustments.
- Always observe the maximum user weight capacity of the bed.
- When adjusting the backrest using the manual hand lever, ensure it is fully locked in position before allowing the client to lie down.
- Motor operation time: 2 minutes ON, 18 minutes OFF to prevent overheating).
- Always unplug the bed before cleaning, servicing, or moving the unit.

MASSAGE MADE BEAUTIFULLY SIMPLE

Unveil the epitome of modern comfort with the Estia Massage Table, a sleek two-section salon bed that combines exceptional stability with contemporary style.

Designed with a single-motor system, the Estia Massage Table allows smooth electric height adjustment, while the manually adjustable backrest ensures versatile positioning. A removable head plug reveals a convenient breather hole, ideal for massage and body treatments. Its robust metal frame supports a high weight capacity, and integrated wheels provide effortless mobility without sacrificing stability. A seamless fusion of performance and style crafted to elevate any professional treatment space.

Height Adjustment (61 - 93 cm)

Adjustable height for ergonomic comfort and ease of use.

Paper Towel Holder

Keeps hygiene essentials close at hand with smooth dispensing and quick, easy reloading.

Clean Lines, Strong Foundation

Features a sleek crossbar metal base for a clean, modern, and aesthetically pleasing finish.

Wide Insert Pillow

Enjoy extra comfort with a wider pillow insert

Adjustable Backrest (0° - 60°)

Easily adjustable via manual hand lever, the backrest can be positioned anywhere between 0° and 60°.


Lockable Wheels

Base wheels provide effortless mobility without compromising stability.



Product Specifications

Length:	200cm
Width:	70cm
Height Range:	61-93cm
Backrest Adjustment Angle:	Up to 60°
Net Weight:	51 kg
Gross Weight:	57 kg
Max. Load Capacity:	200 kg (seating position)
Power Supply:	AC 220-240V, 50Hz/60Hz
Max. Power Consumption:	300W

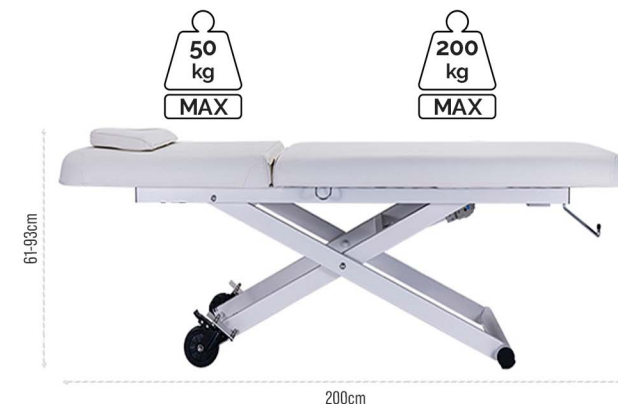


Effortless Hand Remote Control

The Estia features an intuitive hand-held remote, with an optional foot control for hands-free height adjustment. Its soft-touch remote ensures smooth, effortless control, while the manual hand lever allows quick and easy backrest adjustment. Designed for ergonomic efficiency, the Estia delivers reliable performance and lasting comfort for professionals providing focused, high-quality care.

How To Use

Follow these instructions to operate the electric beauty bed safely and effectively.

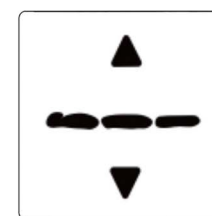

Backrest Adjustment

Easily adjusted by manually raising and releasing the bar

Height Adjustment


Press to raise or lower the bed.



Installation Preparation: We recommend two (2) people for the installation of this beauty bed.


STEP 1

With the help of another person, lift the bed off the pallet by holding the frame beneath the headrest as shown. Carefully remove it from the pallet and place it upside down on a clean, flat surface.

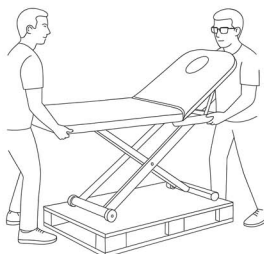


STEP 2

Insert the gliders (B) into each end of the crossbar, then position the assembled crossbar into the runners along the frame.

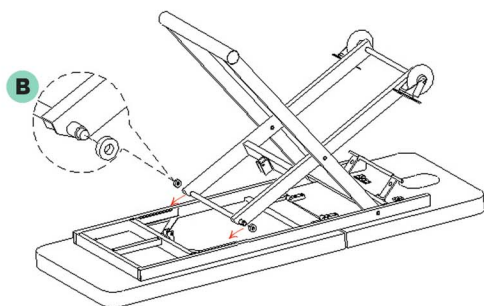



STEP 3

Remove the safety pin and rod from the motor shaft. Insert the motor shaft into the bracket (F) as shown in the image. Reinsert the safety pin and rod, ensuring the pin is fully secured and bent so it cannot fall out.

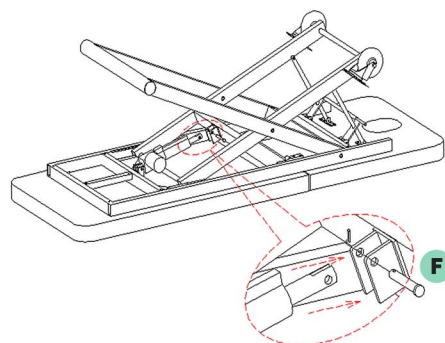


STEP 4

Insert the backrest rods (C) through the crossbar (G), ensuring they are correctly aligned. Once in position, tighten the screws securely to provide full stability and safe operation during use.

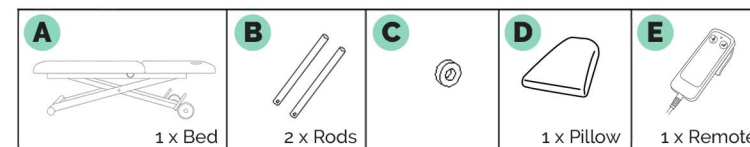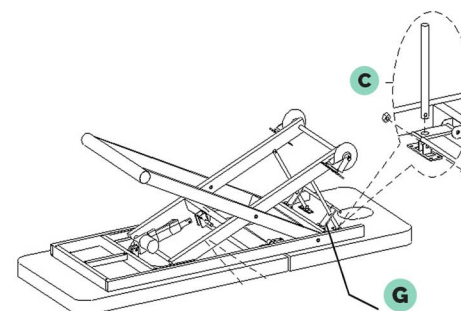

STEP 5

With two people positioned on either side of the bed, carefully flip the bed upright. Insert the pillow (D) into face hole. Plug the power cord into a wall socket. The bed is now ready for use.

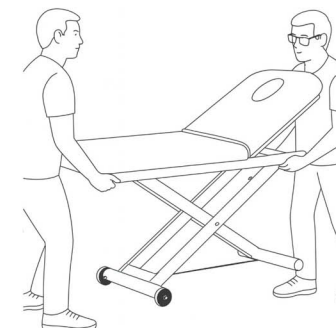

SAFETY WARNING: Turn the power off when the bed is not in use. Regularly inspect the power cord for any signs of damage and keep it away from heat sources. DO NOT allow children to operate this product

Upholstery Care Guide

As a professional esthetician, investing in a high-quality electric facial bed can significantly enhance the comfort and effectiveness of your treatments. To maintain that level of performance and ensure long-term reliability, regular maintenance and proper care are essential. Like any professional equipment, your facial bed requires routine attention to stay in optimal working condition—ensuring safety, smooth functionality, and a consistently elevated experience for your clients.

General Care Tips

Maintain a stable temperature:

- Cold can lead to vinyl cracking
- Heat may cause permanent stretching

Keep out of direct sunlight for long periods to prevent fading and damage. Regular housekeeping helps preserve comfort and appearance.



Cleaning Instructions

Clean frequently to remove body oils that can harden vinyl

Use a colorfast cloth dampened with lukewarm water and mild, alkaline-free soap

Avoid soaking the material

Wipe off any soap with fresh water and a clean cloth

Dry thoroughly with a soft, dry cloth

For tougher grime, gently scrub with a soft brush



Avoid Using These Products

- Hot or boiling water
- Alcohol or hydrocarbon-based cleaners
- Acetone
- Bleach or harsh detergents
- Furniture polish
- Abrasive powders, pastes, or steel wool
- Silicone or petroleum-based products
- Solvent-based or abrasive cleaning agents

Routine Inspection

Perform periodic checks on:

- Hinges • Fasteners • Structural components

Ensure your chair remains safe, stable, and fully functional.

CE & RCM Certification

All electric components in our beauty beds are CE (Europe) & RCM (Australia & New Zealand) certified, meeting the strict safety, health, and environmental standards required in Australia, the EU, and the UK.



WARRANTY PERIOD

STRUCTURE: **5 YEARS** | VINYL: **2 YEARS** | MOTOR: **2 YEARS**

For more information about our warranty, please refer to our website.

DSSE

Australia:

www.dsse.com.au

United Kingdom:

www.dssebeauty.co.uk

Europe:

www.dssebeauty.eu

Do not dispose of old or defective appliances with household waste. Please use designated public collection points for proper disposal.

This manual is for reference only. Specifications may change without prior notice.